

S SERIES AIR HANDLER INSTALLATION INSTRUCTIONS

GENERAL

These instructions are intended as a general guide and do not supersede local codes in any way. Consult with authorities having jurisdiction before installation.

ADP S Series air handlers are suitable for closet or flush mount installations and are designed for electrical heat installation with a matched remote outdoor unit. These units are designed for indoor installations only.

The following words are used throughout this manual to identify levels of hazard seriousness:

DANGER - Immediate hazards that WILL result in severe personal injury or death.

WARNING - Hazards or unsafe practices COULD result in severe personal injury or death.

CAUTION - Hazards or unsafe practices COULD result in minor personal injury or product or property damage.



IMPORTANT

The Clean Air Act of 1990 bans the intentional venting of refrigerant (CFC's and HFC's) as of July 1, 1992. Approved methods of reclaiming must be followed. Fines and/or incarceration may be levied for non-compliance.

RECEIVING

Check equipment for shipping damage. If you find any damage, immediately contact the last carrier.

Check the unit rating plate for unit size, electric heat, coil, voltage, phase etc. to be sure unit matches requirements.

REQUIREMENTS

The installation of the air handler, field wiring, warm air ducts, etc. must conform to the requirements of the National Electrical Code, ANSI/NFPA No. 70 (latest edition) in the United States, and any state laws, and local ordinances (including plumbing or wastewater codes). Local authorities having jurisdiction should be consulted before installation is made. Such applicable regulations or requirements take precedence over the general instructions in this manual.

Install the conditioned air plenum, ducts and air filters (not provided) in accordance with NFPA 90B Standard for the Installation of Warm Air Heating and Air-Conditioning Systems (latest edition).

This unit is certified for installation clearances to combustible material as listed on the unit rating plate. Accessibility and service clearances must take precedence over combustible material clearances.

TABLE OF CONTENTS

Installation	2
Condensate Drain	2
Refrigerant Charging Instructions	4
Blower Speed Changes	4
Airflow Data	5
Electrical Data	5
Thermostat Low Voltage Connections	6
Electrical Wiring Diagrams	7
Warranty	8



ADP Air Handler Limited Warranty

Term of Warranty: Advanced Distributor Products (ADP) warrants that products sold shall be of merchantable quality, free of defects in material and workmanship, under normal use and service, for a period of five (5) years from the date of installation, not to exceed six (6) years from the date of manufacture subject to the terms of ADP's limited warranty.

For information on this product's warranty, including accessing complete warranty terms, registering for an extended warranty*, or obtaining instructions on filing a warranty claim, please go to www.ADPwarranty.com.

* *In such states or provinces where registration requirements are prohibited, failure to complete registration by the consumer does not diminish his or her warranty rights.*

EQUIPMENT INFORMATION

Please complete information below and retain this warranty for records and future reference.

Unit Model Number: _____

Serial Number: _____

Installing Contractor: _____

Installation Date: _____ Phone: _____

