

Installation Instructions

Downflow Kit

SHIPPING & PACKING LIST

Qty	Part Description	Dimensions
(2)	Internal Drip Shields Insulated (See Figure 2)	2" x 15"
(2)	Lower Blowoff Shields (See Figure 2)	2.25" x 16.5"
(2)	Outer Air Shields With pre-drilled holes on the narrow edges (See Figure 3)	2" x 17"
(4)	Cable Ties	5.5"



Instructions:

Step 1: Remove coil from case.

Step 2: Remove coil from drain pan by removing the screws located on the lower delta plates (two in front and two in back). (See Figure 1)

Step 3: Install insulated internal drip shield and lower blowoff shields to both sides of the drain pan. (See Figure 2)

Step 4: Reinstall coil to drain pan and reattach with the 4 screws removed in step 2. (See Figure 1)

Step 5: Place Outer Air Shields at bottom of each slab so that the shield is touching the drain pan. (See Figure 3)

Step 6: Use cable ties to attach Outer Air Shields to an adjacent hairpin at the front and back using the pre-drilled holes in the shields. Ensure the shields are secure, flush to the drain pan, and will not rattle. (See Figure 3)

Step 7: Re-install coil into the case.



Product improvement is a continuous process at Advanced Distributor Products. Therefore, product specifications are subject to change without notice and without obligation on our part. Please contact your ADP representative or distributor to verify details.

© by Advanced Distributor Products. All rights reserved.