

Installation Instructions

Downflow Conversion Kit

used to Modify Air Handler Units for Downflow Application



Scan to see
the Downflow
Installation Video



Go to your app store
and download a free
QR Code Reader



WARNING



Improper installation, adjustment, alteration, service or maintenance can cause personal injury, loss of life, or damage to property.

Installation and service must be performed by a licensed professional installer (or equivalent) or a service agency.



CAUTION



Physical contact with metal edges and corners while applying excessive force or rapid motion can result in personal injury. Be aware of, and use caution when working near these areas during installation or while servicing this equipment.

GENERAL



This kit is used to modify air handler units for use in downflow applications. The procedure requires that the installer remove the evaporator coil and re-install it for downflow air discharge application.

Figure 1 shows the air handler unit as configured at the factory. As shipped, some models are configured for

upflow air discharge, and some models are configured for either upflow or horizontal left-hand air discharge.

Figure 2 shows the air handler unit after re-configuring for installation in downflow air discharge applications.

NOTE: A downflow combustible floor base is **not required** for the applicable air handler.

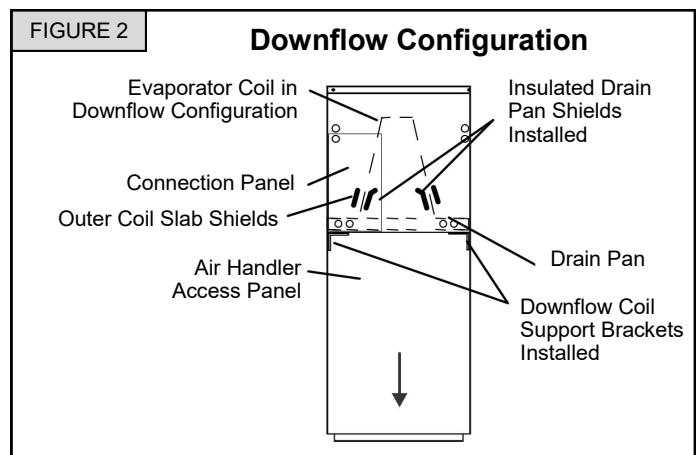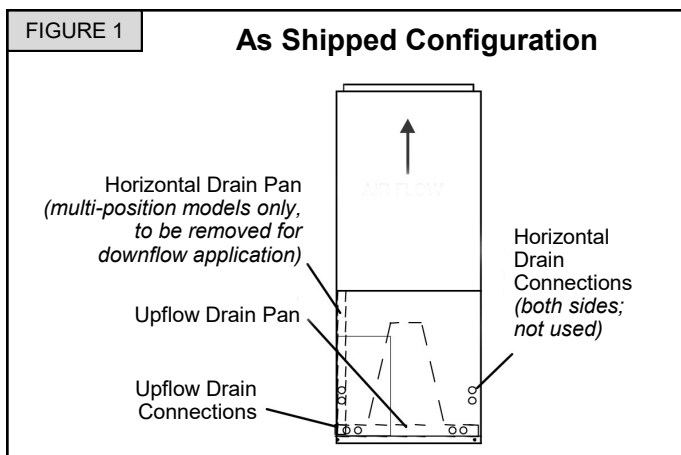

Product improvement is a continuous process at Advanced Distributor Products. Therefore, product specifications are subject to change without notice and without obligation on our part. Please contact your ADP representative or distributor to verify details.

© by Advanced Distributor Products. All rights reserved.

GENERAL

IMPORTANT

A2L refrigerant sensor bracket supplied with this kit must be installed as per the instructions on the product installation instruction. Refer to refrigerant detection system requirements section in the installation instructions.

IMPORTANT


Increase blower speed on all models for downflow operation. See page 8 for details.

WARNING

The State of California has determined that this product may contain or produce a chemical or chemicals, in very low doses, which may cause serious illness or death. It may also cause cancer, birth defects, or reproductive harm.

SHIPPING & PACKING LIST

Air Handler Sizes	18 & 24	25, 30, 36 (TUY24/36)	31, 37-60 (TUY48/60)	Figure 3 Parts
Part Number	165873193	165873194	165873195	
Part Description	Quantity	Quantity	Quantity	
Insulated drain pan	1	1	1	A
Insulated downflow coil support brackets	2	2	2	B
Insulated Inner drain pan drip shields	2	2	2	C
Non-insulated outer coil slab shields	2	2	2	D
Front and rear insulated air seal plates	2	2	2	E
Tapping screws (#8 x 1" AB hex washer HD) for downflow coil support brackets	6	6	6	F
Nylon cable ties (5-1/2" long) for outer coil slab shields	4	4	4	G
Insulating foam tape for coil suction manifold (16" Long)	1	1	1	H
Insulating foam tape for blower housing	3	N/A	N/A	I
A2L Refrigerant Sensor Bracket	1	1	1	J

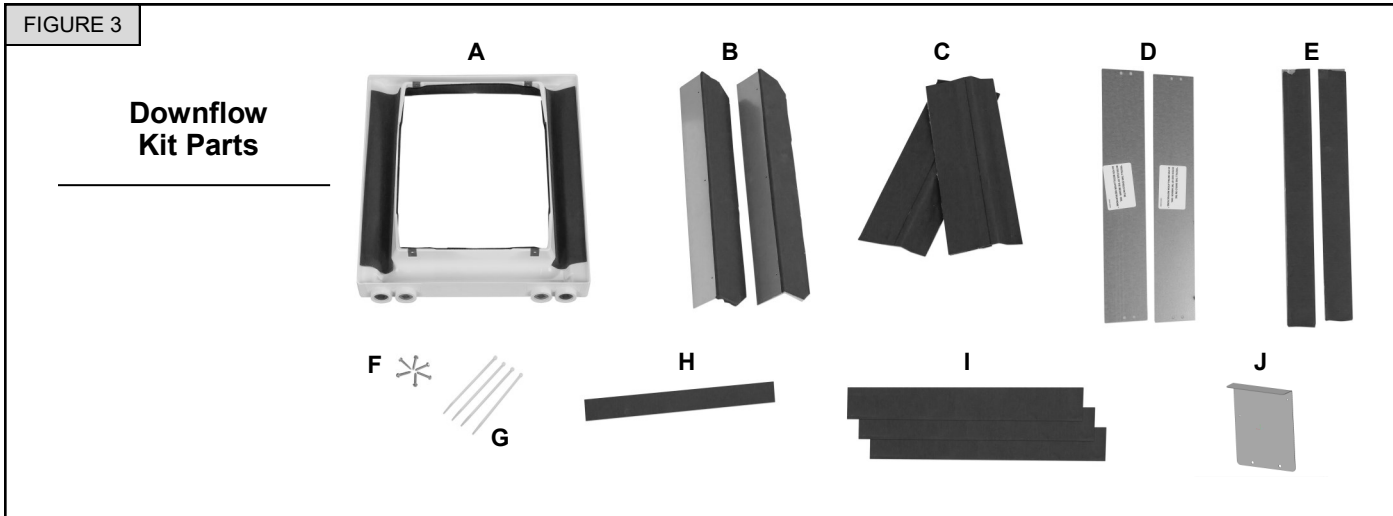

REMOVING COIL FROM HOUSING




1. Remove the connection panel, access panel, and the blower panel. Keep all panels and screws; these will be re-used when reassembling.
2. Remove the support bar. Keep the bar and 4 screws for later use.
3. Remove all upflow and horizontal drain pan mounting brackets (Figures 4 and 5). Discard these brackets.
4. Carefully slide the coil and the horizontal drain pan assembly from the air handler cabinet. Discard the horizontal drain pan.
5. Remove the rear coil support bracket (Figure 6); discard.

CAUTION

Be certain all power has been disconnected from the air handler before beginning work.



WARNING

Excessive Weight Hazard - Use two or more people when moving and installing the unit. Failure to do so can result in back or other type of injury.

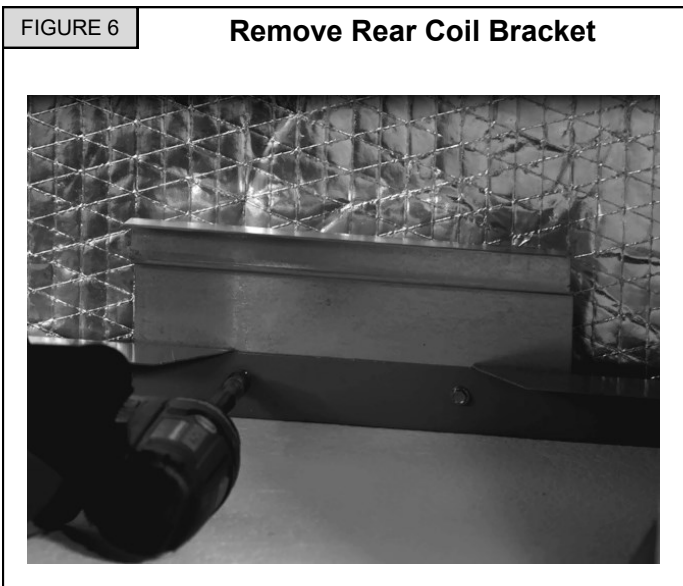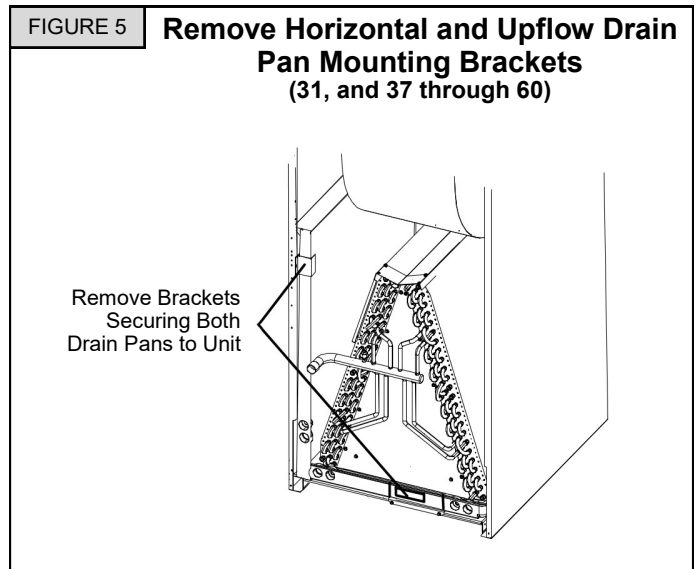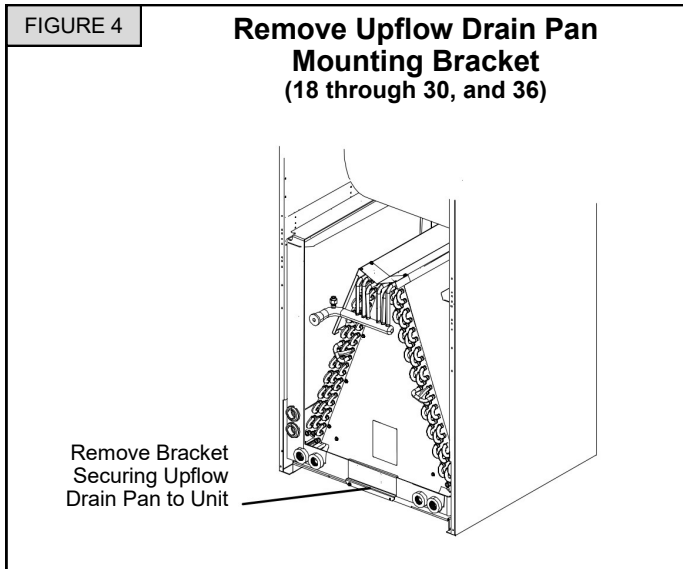

MODIFYING INDOOR COIL

1. Remove 4 screws attaching coil to drain pan (Figure 7).
2. Remove the drain pan from the coil and replace it with the kit-provided insulated drain pan (Part A). Reinstall the 4 screws.
3. Working from the bottom of the coil, install provided insulated drain pan drip shields (Part C, two each) as illustrated in Figure 8. Be sure each is inserted snugly between the drain pan and slab.
4. Install both outer coil slab shields (Part D, two each) using the provided tie-wraps (Part G, four each) (Figure 9) and secure to return bends on both ends. Ensure the shields are within 1/4" from the drain pan.
5. Wrap the coil suction manifold and TXV bulb with the

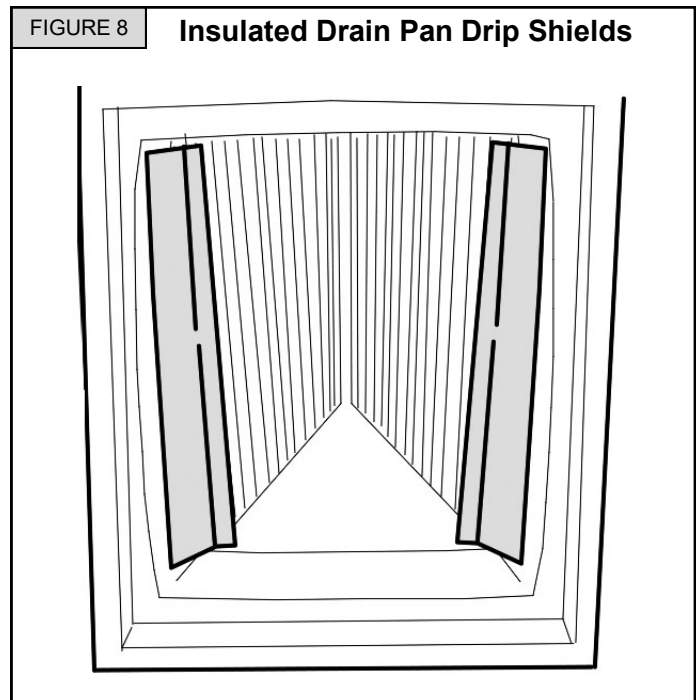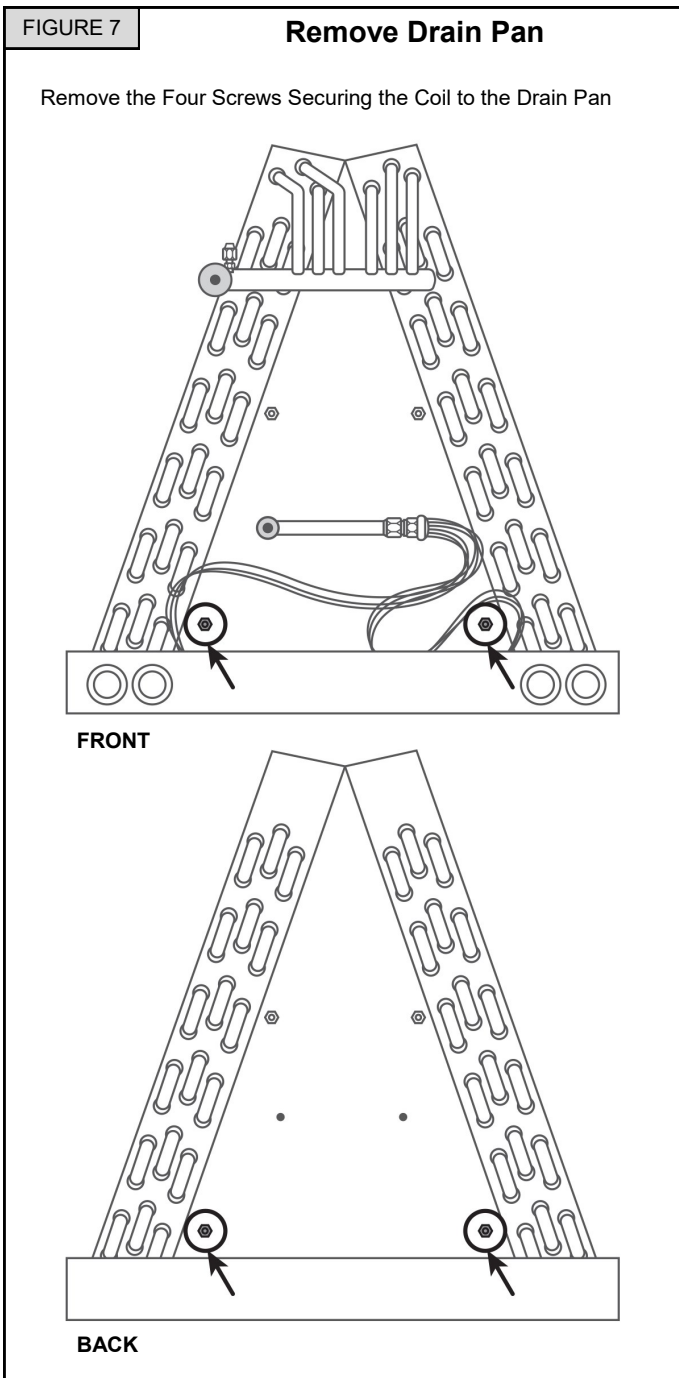

MODIFYING INDOOR COIL (CONT.)


provided insulating foam tape (Part H) to prevent condensate from dripping or blow off the manifold, as shown in Figure 10.

NOTE: Failure to install all shields (steps 3 and 4), or the adhesive back insulating foam (step 5) can result in condensate blow-off and subsequent damage to the building and its contents.


FIGURE 10

Insulating Coil Suction Manifold


- A. Insert insulating foam tape behind suction manifold as exemplified below.

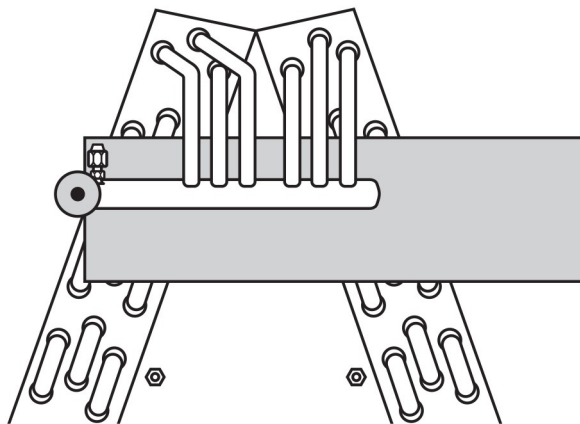

- B. Remove backing from insulating foam tape to expose adhesive side as exemplified below.

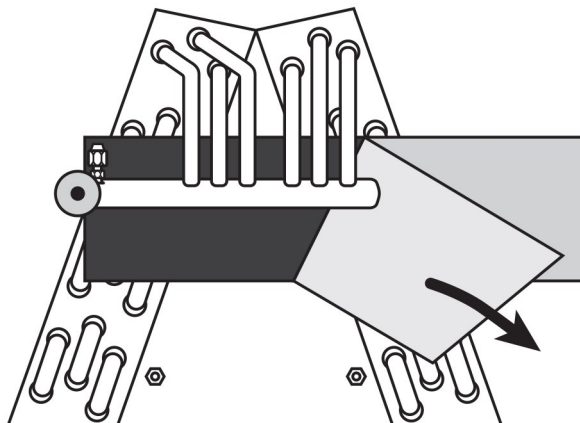

- C. Fold insulating foam tape over front of the suction manifold as exemplified below.

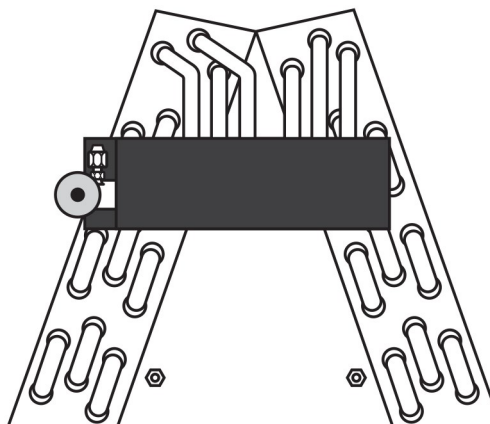

MODIFYING AIR HANDLER HOUSING

1. Turn housing upside down.
2. Reinstall the support bar using 4 screws (Figure 11)
3. **Sizes 18 & 24 Units Only:** Use three strips of the provided insulated tape (Part I) and attach to exposed side of the blower housing (Figure 12). This is required only for these sizes to prevent sweating in downflow.

NOTE: Removing the blower housing to perform this task is optional.

NOTE: If the insulated tape covers the wiring diagram, an additional wiring diagram is included in the kit,

4. Using the two insulated coil support brackets (Part B and six #8-18 x 1" screws (Part F) provided in the downflow kit, install the coil supports brackets to the inner sides of the cabinet (Figures 13 and 14).
5. Position the front and rear insulated **air seals** (part E) onto the downflow coil support brackets (Figure 15). Be sure the seals seat against the back and front of the air handler and that the front will seat against the access panel when reinstalled.

FIGURE 11

Installing Support Bar



FIGURE 12

Blower Housing Insulated (Sizes 18 & 24)



FIGURE 13

Installing Insulated Coil Support



FIGURE 14

Both Coil Support Brackets Installed


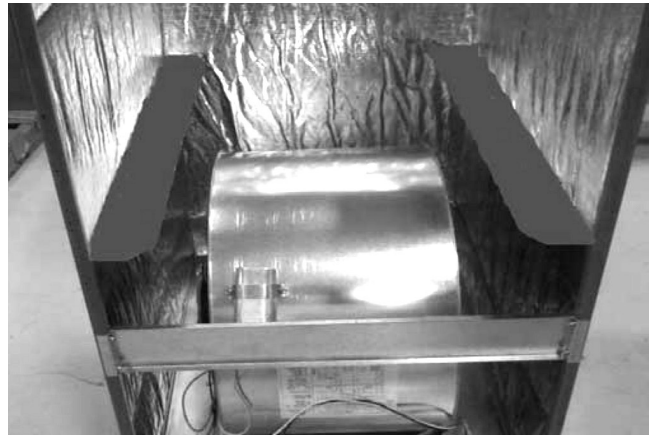


FIGURE 15



Air Seals Installed

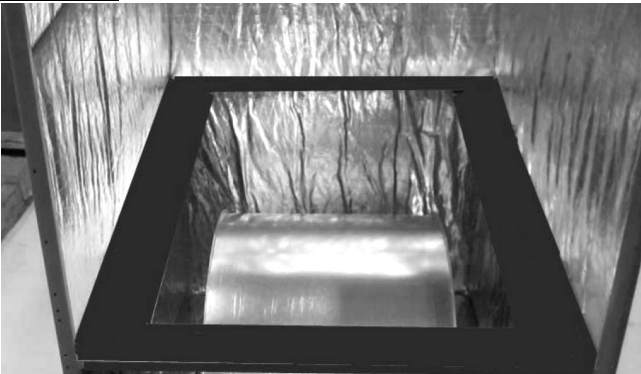

REFRIGERANT DETECTION SYSTEM REQUIREMENTS

Sensor Installation for Downflow Configuration

1. Remove the sensor from its original location.
2. Remove the multi-position and the upflow sensor bracket from the unit.
3. Rotate the air handler as per the downflow kit instructions.
4. Assemble the sensor to the sensor bracket provided with the downflow kit.
5. Attach the sensor bracket to the coil support bracket using a self tapping screw as shown.
6. Ensure that the sensor is mounted so that the sensing element is facing the coil and it is not blocked by the distributor tubes or the TXV.
7. Ensure that the sensor cable and the sensing element is oriented as shown in the picture.
8. Plug the sensor into the "Sensor #1" Port on the RDS Board.

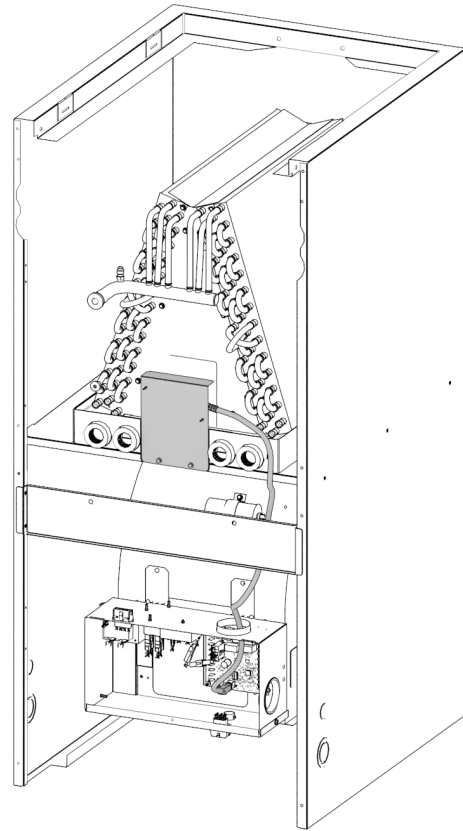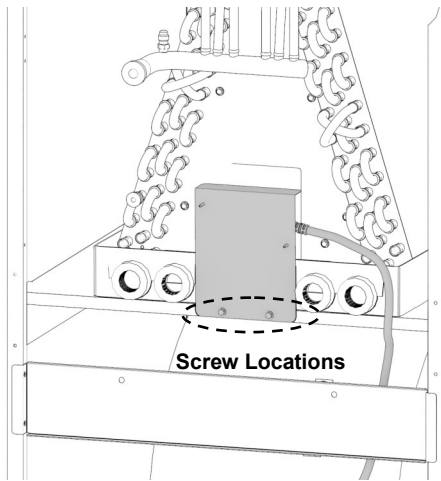


REINSTALLING IN DOWNFLOW CONFIGURATION

1. Install evaporator coil with insulated drain pan assembly on the downflow coil support brackets.
2. Re-install the connection panel making sure that the openings are properly aligned with the refrigerant lines.
3. Re-install and fasten the blower panel in the inverted position.
4. Re-install and fasten the access panel.
5. **Size 18 & 24 units only:** Affix the provided wiring diagram (Part J) to the exterior of the unit access panel.
6. Install converted air handler onto floor opening. Apply sealant as required.
7. Install air filter.

FIGURE 16


Installing Coil

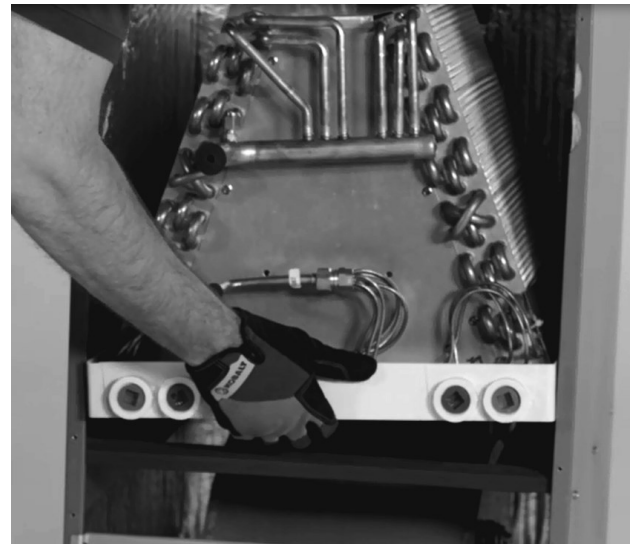

REINSTALLING IN DOWNFLOW CONFIGURATION (CONT.)

FIGURE 17

Downflow Configuration

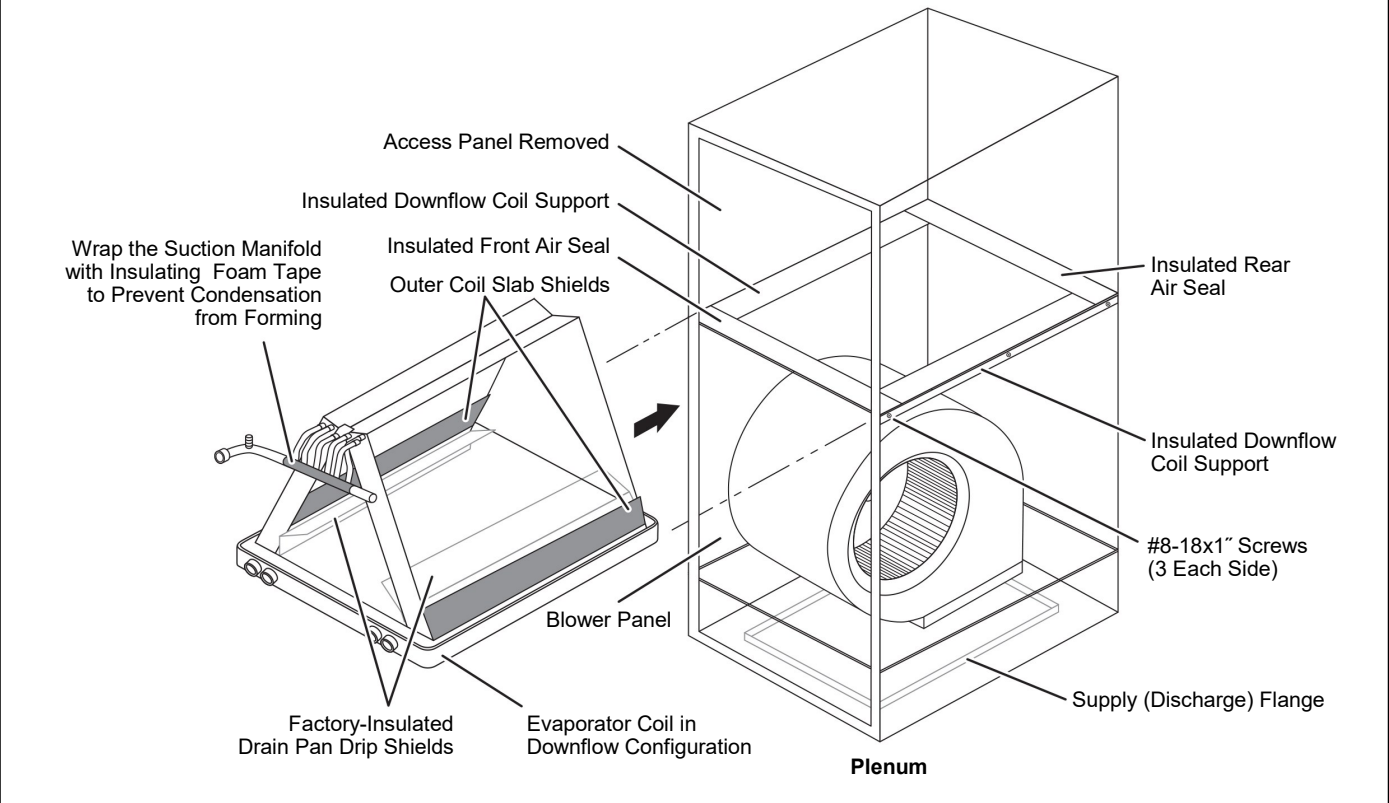

CHANGE BLOWER SPEED

IMPORTANT

Increase blower speed on all models for downflow operation.

3-Speed PSC Motor

1. For downflow operation, use the next highest speed setting available.
2. If set to high speed from the factory, use high speed for downflow.
3. Refer to the air handler installation instructions for details on how to change the blower speed.

5-Speed High Efficiency ECM Motor

1. If factory-set speed tap 3 is desirable for your application, use speed tap 5 for downflow.
2. If speed tap 2 is desirable for your application, use speed tap 3 in downflow.
3. Refer to the air handler installation instructions for details on how to change the blower speed.

WARNING

Electric shock hazard! - Disconnect all power supplies before servicing.

Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.